




Electric Starting Procedure

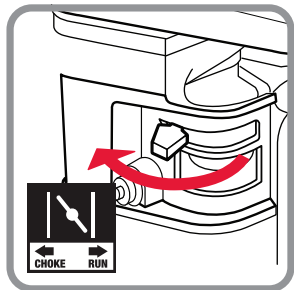


1. CLOSE CHOKE

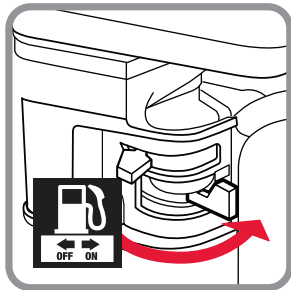

2. OPEN FUEL VALVE

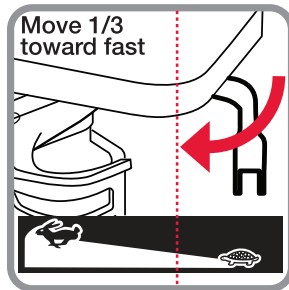

3. ADJUST THROTTLE

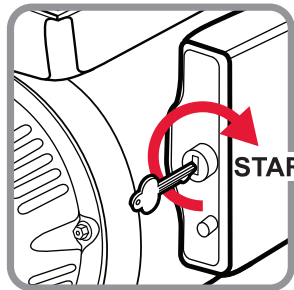

4. TURN TO START



5. CHOKE TO RUN

IMPORTANT: Breaking-in the engine will help to ensure proper equipment and engine performance. The operational break-in period will last about 3 hours of use. During this period:

- Do not apply a heavy load to the equipment
- Do not operate the engine at its maximum speed.


PREDATORTM

ENGINES

QUICK START GUIDE

Horizontal Shaft Gas Engine Item: 69736

Engine Components

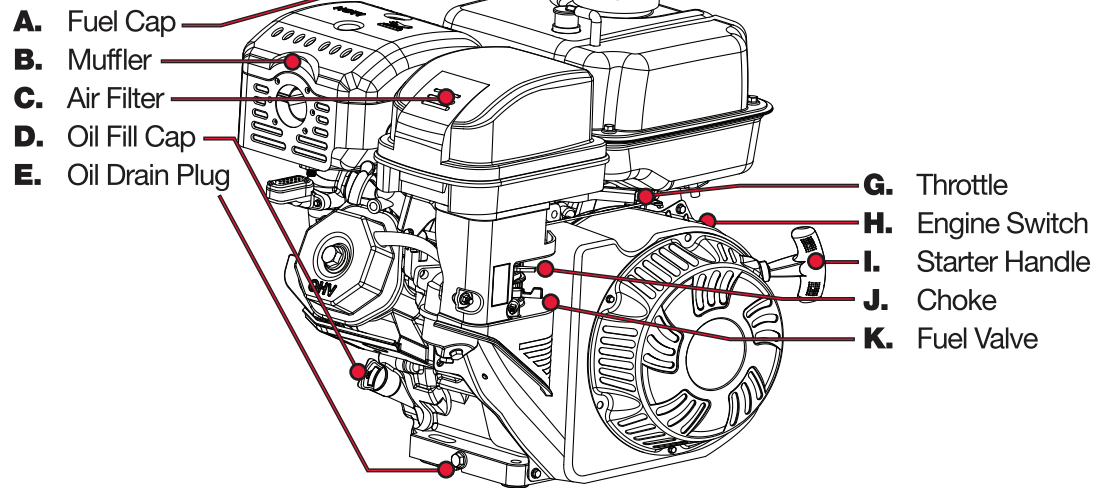


READ AND UNDERSTAND USER MANUAL BEFORE USE.




Add Fluids

Check oil and fuel levels
If needed, fill as shown below

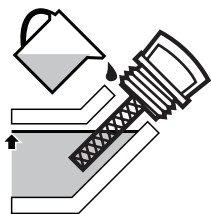


Add oil to engine
crankcase

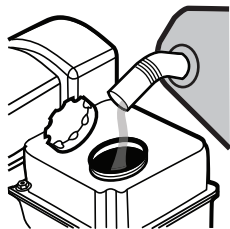

Add fuel to within
1" of the rim of the tank


Note: Use regular Unleaded 87 Octane.
Engine not designed for E85 Ethanol blend.

Assembly

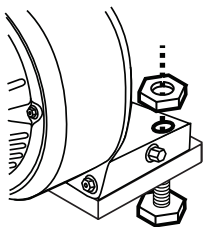


Mount the engine
securely in place

For Electric Start

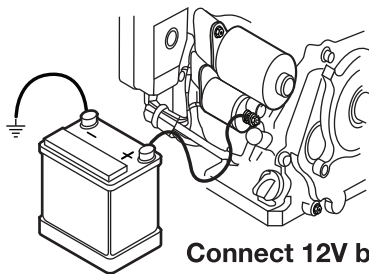


Connect 12V battery


Manual Starting Procedure

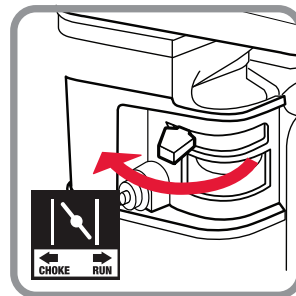


1. CLOSE CHOKE

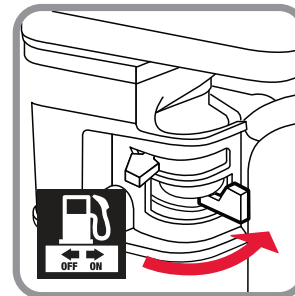


2. OPEN FUEL VALVE

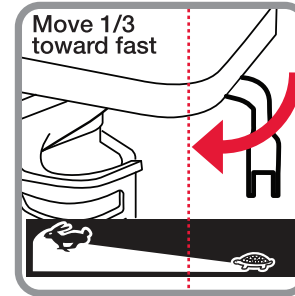


3. ADJUST THROTTLE

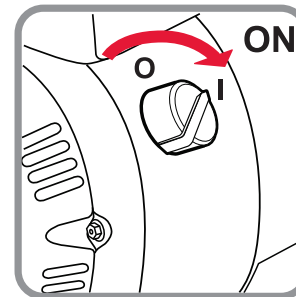

4. SWITCH ON

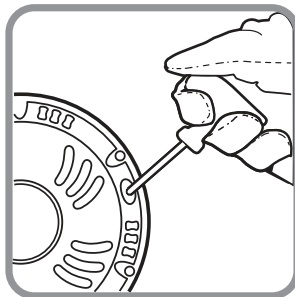

5. PULL START

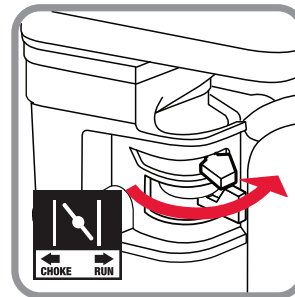

6. CHOKE TO RUN

IMPORTANT: Breaking-in the engine will help to ensure proper equipment and engine performance. The operational break-in period will last about 3 hours of use. During this period:

- Do not apply a heavy load to the equipment
- Do not operate the engine at its maximum speed.

PREDATOR[™]
E N G I N E S